
American Standard AVERY TM ELECTRONIC PULL-DOV KITCHEN FAUCET Thank you for selecting American Stand the benchmark of fine quality for over 10 To ensure that your installation proce these instructions carefully before your	lard 00 years. e eds smoothly-please read	
RECOMMENDED TOOLS		
Flat Blade S	Screwdriver Phillips Screwdriver	Adjustable Wrench
1 INSTALL FAUCET WITH OR WITHO		
(A) Installation on 1-hole mounting surfa	CAUTION	Turn off water at main supply
 Make certain the SEAL (12) is properly signal (4) through mounting ring and deck, seat From below: Insert CABLES (12) and HC LOCKNUT (8). Assemble RUBBER WASHER (6), BRASE 	eated in bottom recess of FAUCET (2). Insert t SPOUT BASE onto sink or mounting surfac DSES (3) through RUBBER WASHER (6), BRA S WASHER (7), and threaded LOCKNUT (8)	e. Do not use putty . ASS WASHER (7) , and threaded
 of sink or mounting surface. Hand tighten LOCKNUT (8). Make sure faucet is aligned properly with handle on the right and logo facing directly forward. 		
) on LOCKNUT (8). Work your way around L	
(B) Optional: Installation on 3-hole mou	nting surface: Requires Deck Escutcheon	- order separately
 Make certain the SEAL (12) is properly seated in bottom recess of FAUCET (2) and FOAM SEAL (13) is properly seated in bottom recess of DECK ESCUTCHEON (1). Do not use putty. (Please refer to the template provided) 		
 Screw in two THREAD RODS (14) onto bottom of DECK ESCUTCHEON (1). Place deck escutcheon over mounting holes of the deck. 		
•	i, SPRAY HOSE (4) and SHANK (5) through h	ole of DECK ESCUTCHEON (1) and
 Follow mounting instructions above to secure faucet to mounting surface. Thread the MOUNTING NUTS (10) to secure DECK ESCUTCHEON. 	A SPOUT BASE 12 11 5 3 4 6 7 8 9 9	ITING 💮 🔊 🗇 🗋 🗌


2 MAKE WATER SUPPLY CONNECTIONS


- Turn off hot and cold water supplies before beginning.
- Install INLINE FILTER (3) on each wall supply outlet. Be sure that INLINE FILTER (3) is inserted in the correct direction. (See Illustration)
- Connect FLEXIBLE SUPPLY HOSES (1, 2) directly to INLINE FILTER (3). Connection on fitting supplies are 3/8" compression. Connect left supply hose (Red Stripe) to Hot wall supply. Connect right supply hose (Blue Stripe) to Cold wall supply. Use adjustable wrench to tighten connections. Do not over tighten.
- * Faucet supplies are 35" long from faucet base.
- Note: If additional supply length is required, installer must purchase additional parts separately.
- Important: If SUPPLY HOSES (1, 2) are too long, loop as illustrated to avoid kinking.



- Push the SPRAY HOSE END (1) into FEMALE ADAPTER (2) and slide down locking collar to secure connection.
- Orient solenoid valve with the orientation label facing up.
- Push SOLENOID ASSEMBLY (3) connection "B" into the HOSE CONNECTOR (4) as shown, and slide down locking collar towards SOLENOID ASSEMBLY (3) to secure connection.
- Push SOLENOID ASSEMBLY (3) connection "A" into other end of FEMALE ADAPTER (2) as shown, and slide locking collar towards SOLENOID ASSEMBLY (3) to secure connection.
- With HAND SPRAY (5) seated in SPOUT (6), install WEIGHT (7) at labeled area onto HOSE (8), secure with SCREW (9).
- Important: Make sure you pull out hose and check to see that it moves freely and is not obstructed by supply hoses, solenoid valve or items in the bottom of the cabinet.

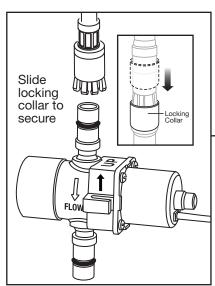

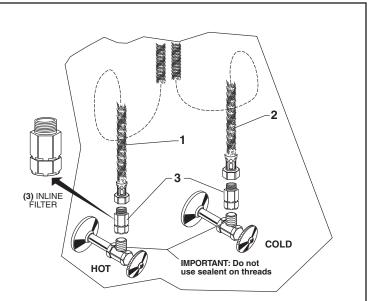


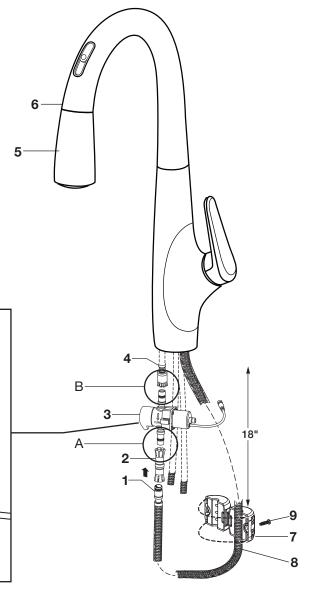

4 ELECTRICAL CONNECTIONS - SENSOR TO SOLENOID


 Connect SOLENOID CONNECTOR (12) with the sensor connector from the faucet with the yellow tag stickers, secure this connection by installing inside the CONNECTORS HOUSING (3) as shown and lock by twisting the white end pieces.

OTE:	Use Qty. (4) AA Alkaline type
	batteries only.

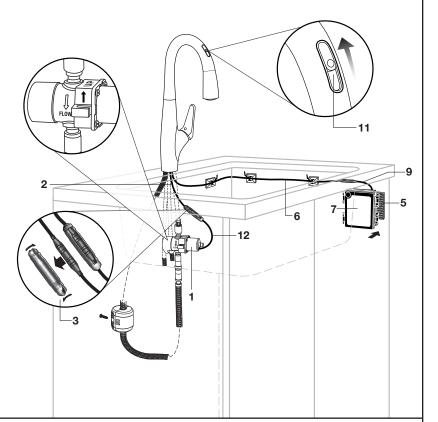


5 ELECTRICAL CONNECTIONS – BATTERY HOLDER

- Identify desired BATTERY HOLDER (7) location. Battery holder should be located so batteries can be easily accessed, with in 6ft of the faucet hook and loop (black strip) (5).
- Attach CABLE MOUNTS (4) along the inside of the kitchen cabinet walls positioning them accordingly as shown. Wipe clean surfaces before attaching CABLE MOUNTS (4).
- Attach 'HOOK TO LOOP' FASTENER (black strip)
 (5) to the back side of the BATTERY HOLDER (7) and attach 'HOOK TO LOOP' FASTENER (black strip)
 (5) on desired location inside the kitchen cabinet. Wipe mounting surface clean before attaching 'HOOK TO LOOP' FASTENER (black strip)
 (5).
- Secure longer SENSOR CABLE (6) to the CABLE MOUNTS (4) using the WIRE TIES (8) provided.
- Ensure that the BYPASS KNOB (10) on the SOLENOID ASSEMBLY (1) is in the "OFF" position.
- With the SLIDING DOOR (11) in the open position, connect the BATTERY HOLDER CABLE (9) to the other end of the long SENSOR CABLE (6), that is coming out of the faucet. The sensor will start to blink several times and then stop.

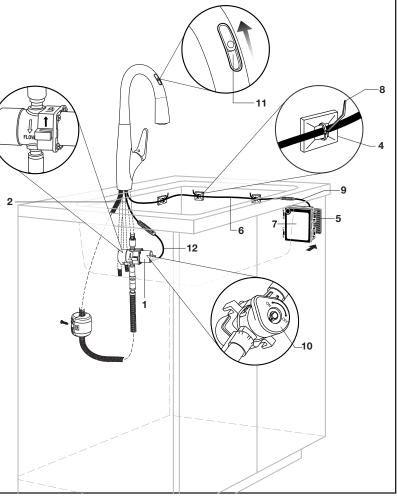

6 TEST INSTALLED FAUCET & CHECK CONNECTION FOR LEAKS

- Move HANDLE (1) into "off" position.
- Turn on water supplies and check connections for leaks.
- With HANDLE (1) in "off" position, unthread SPRAY (3) from HOSE (2).
- Operate HANDLE (2) up and down, left and right to flush water lines thoroughly.
- Replace SPRAY (3) onto HOSE (2).
- Operate HAND SPRAY and check connections for leaks.

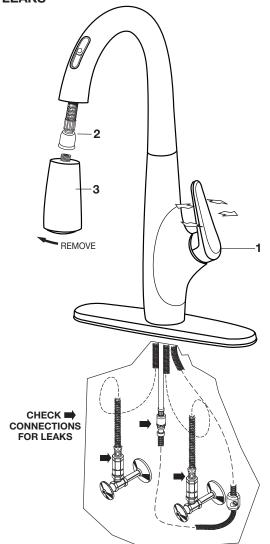

FAUCET OPERATION – AUTOMATIC MODE, MANUAL MODE AND FEATURES

Automatic Mode

7

- Make sure the SLIDING DOOR (1) and HANDLE (2) are in the open position.
- To turn on the water, momentarily place your hand within 3" of the SENSOR (3).
- To turn off the water, momentarily place your hand again within 3" of the SENSOR (3).

Manual Mode

• Close the SLIDING DOOR (1) and use the HANDLE (2) to turn on and off the water.


FEATURES

Safety Timer

• The faucet will automatically turn off the water after 5 minutes of continuous use. Momentarily place you hand in front of the sensor to turn on the water.

Low Battery Indication

- The sensor will start to blink constantly every second. This is the indication that the batteries are low in power. Replace the batteries with Qty. (4) AA Alkaline type batteries.
- Battery lifetime is approximately 1 year under normal use.

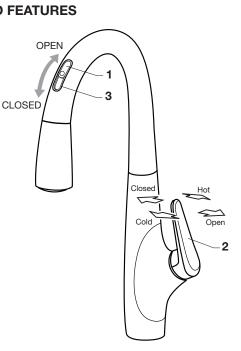

7a SPRAY OPERATION

- With FAUCET on, press TOGGLE BUTTON (4) on SPRAY (3) to switch from stream to spray.
- Press and hold PAUSE BUTTON (5) to temporarily stop flow from SPRAY (3). Release PAUSE BUTTON (5) to resume flow from SPRAY (3).

3

8 SERVICE

Battery needs replacement:

- Sensor will start to blink continuously every second. This is the indication that the batteries are low in power.
- Replace batteries in battery holder with Qty (4) AA alkaline type batteries.
- Batteries last approximately one year.
- Always change all 4 batteries. Failure to replacing all 4 batteries at the same time may cause faucet electronics to not work properly.

Reduced or distorted flow:

Debris or dirt accumulating at inlet or AERATOR MAY CAUSE REDUCED OR DISTORTED FLOW.


- A) Clean inline filter at inlet hoses.
- **B)** Turn hot and cold water supply off. Open valve in mixed position for two seconds to relief pressure close valve.
- **C)** Disconnect inlet hoses at stop valve and clean screen filter. If necessary remove inline filter and rinse at another water source.

Aerator Clean Out

- AERATOR may accumulate dirt causing distortion and reduced water flow. Remove AERATOR by using the AERATOR KEY (9) and rinse to clear any debris.
- Clean out the SCREEN (10) by removing SPRAY HEAD (11).

Power failure (manual bypass):

• In the event of a power failure, turn the BYPASS KNOB (1) on the SOLENOID ASSEMBLY (2) to the "ON" position. The faucet will be in MANUAL MODE (see section 5) and the HANDLE (3) can be used to turn on and off the water.

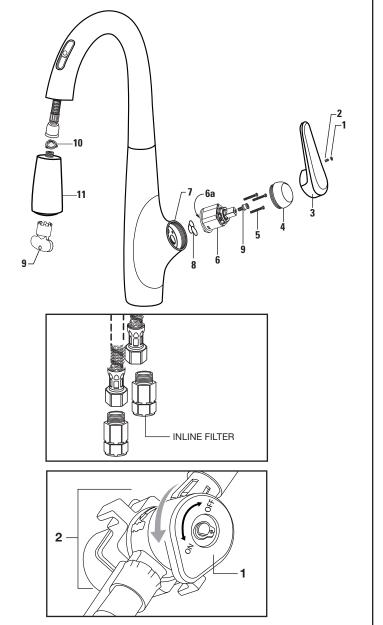

5

4

SPRAY

STREAM (AERATOR)

9 CARE:

DO: CLEAN WITH CLEAR WATER. DRY WITH A SOFT COTTON FLANNEL CLOTH.

DO NOT: DO NOT CLEAN THE PRODUCT WITH SOAPS, ACID, POLISH, ABRASIVES, HARSH CLEANERS, OR A CLOTH WITH A COARSE SURFACE.

