


## INSTALL VALVE TRIM

- When finished tiling the wall, remove PLASTER GUARD (1) and turn off water supply.
- Push CAP (2) over VALVE CARTRIDGE (3).
- Mount ESCUTCHEON (4) to valve body with SCREWS (5).
- Push DIAL PLATE (6) over CAP (2) and into the four alignment holes in ESCUTCHEON (4).

INSTALL TUB SPOUT, SHOWER HEAD, SHOWER ARM WITH FLANGE

- Remove pipe cap and plug from shower and tub rough piping.
- Slip TUB SPOUT (1) onto tub nipple and tighten with 4mm Hex Wrench.
   CAUTION: Protect finish on TUB SPOUT when installing.
- Install SHOWER ESCUTCHEON (2) onto SHOWER ARM (3). Apply sealant or Teflon tape to threads on both ends of SHOWER ARM (3) and thread longer leg of SHOWER ARM (3) into shower elbow.
- Thread SHOWER HEAD (4) onto SHOWER ARM (3). CAUTION: Protect finish on SHOWER HEAD and ARM when installing.

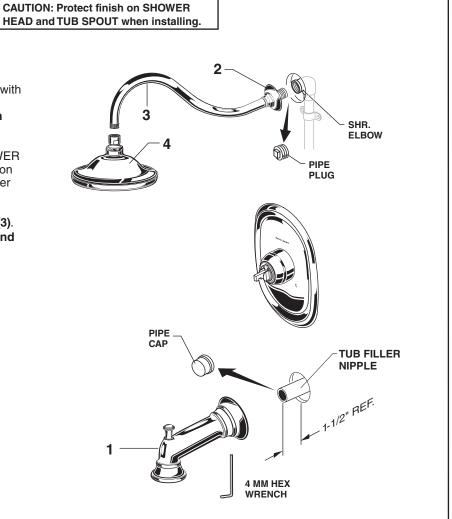

1

2

(4) ALIGNMENT -HOLES FOR DIAL PLATE

5

4

6

3

3	ADJUST HOT LIMIT STOP
-	<ul> <li>HOT LIMIT SAFETY STOP ADJUSTMENT</li> <li>By restricting handle rotation and limiting the amount of hot water allowed to mix with the cold, the HOT LIMIT SAFETY STOP reduces risk of accidental scalding. To set the maximum hot water temperature of your faucets, all you need to do is adjust the setting on the HOT LIMIT SAFETY STOP.</li> <li>Use a flat blade screwdriver or your fingers to pull up and rotate red HOT LIMIT SAFETY STOP (1). Follow Step "A" or "B" to adjust min./max. discharge temperature. "0" being the hottest to "7" the coldest temperature setting. Factory set at "0".</li> <li>Pry RED RING FORWARD AND ROTATE COLOCKWISE ONE CLICK</li> <li>Pry RED RING FORWARD AND ROTATE CLICK NUBBERS</li> <li>Pry RED RING FORWARD AND ROTATE CLICK NUBBERS</li> </ul>
4	HANDLE INSTALLATION
	Install HANDLE (1) by pushing it onto CARTRIDGE STEM (2) and tightening SET SCREW (3) from below with 2.5mm Hex Wrench supplied.
5	SERVICE
	<ul> <li>If faucet drips, operate handle several times from "off" to "on". Do not apply excessive force.</li> <li>Clogged CARTRIDGE (4) inlets may cause reduced flow in "full on" hot or cold. To clean inlets, first turn off water supply, then:</li> <li>Remove HANDLE (1), CAP (2) and CARTRIDGE (4). Clean inlets and MANIFOLD (5).</li> <li>Reassemble CARTRIDGE (4), alternately tightening SCREWS (3).</li> <li>Replace CAP (2) and HANDLE (1). Check flow.</li> </ul>
6	CARE INSTRUCTIONS:
	DO: SIMPLY RINSE THE PRODUCT CLEAN WITH CLEAR WATER. DRY WITH A SOFT COTTON FLANNEL CLOTH.
	CLOTH WITH A COARSE SURFACE.

