

BOSCO

INSTALLATION AND CARE GUIDE FOR STAINLESS STEEL SINKS



Thank you for your purchase of an BOSCO sink. We are confident that with the proper installation of this sink you will get many years of enjoyment and use. Please take a moment to review the installation and care instructions, before installing

- **ATTENTION: THIS SINK MAY CONTAIN SHARP EDGES. USE CAUTION WHEN HANDLING SINK WE RECOMMEND WORK GLOVES TO PREVENT INJURY**
- **ATTENTION INSTALLER, PLEASE LEAVE THIS LEAFLET WITH THE HOMEOWNER**

CARE AND MAINTENANCE

WHAT TO DO

For regular routine cleaning, use a non-abrasive cleaner. This will keep the sink free from residue and grease. Since the detergent used for washing dishes may not be thoroughly effective in removing grease from the sink, the best results can be obtained by direct application of a non-abrasive household cleaner. Cleaning products containing a mild abrasive and recommended by their manufacturer for use on stainless steel sinks are generally satisfactory if the product use directions on the package are followed.

WHAT NOT TO DO

Do not use common steel wool scouring pads or metal implements such as scrapers and wire brushes. Do not leave rubber pads in the sink. The contact points where the mat rests on the sink tend to collect residue which may leave marks on the sink and result in unsanitary areas. Do not use a detergent containing chlorine, silver or sulfur hydrochloric acid. We advise that all the user use the neutral detergent with a cloth or sponge and rub in the direction of the grain. Rinse with water.

BOSCO

INSTALLATION INSTRUCTIONS -SINKS WITH TEMPLATES

- For the purpose of clarity, only a double bowl is shown below to illustrate typical installation details which are common to single bowl.


NOTE: The template for making the sink-opening in the countertop is provided in the box

- The outer edge of the template indicates the perimeter of the sink and therefore the actual area of the countertop which will be occupied by the sink when it is installed
- The inner edge of the template indicates the actual area of the countertop which must be cut out to accommodate the sink.
- **Depending on your sink model, your template may look slightly different than the template in the illustration**
- **Ensure your template is correctly orientated on the countertop.**
- **This sink may contain sharp edges. Please handle with care.**

You will need the following tools


- Pencil
- mounting clips
- drill
- Jigsaw
- mounting screw

1. remove the center section of the template by cutting along the inner edge of the template

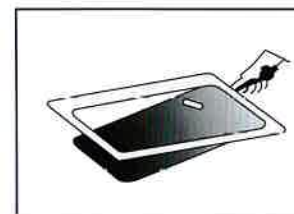

2. Place the template on the countertop in the exact location where the sink is to be installed and take into account Placement of the faucet


- Ensure that the location chosen on the countertop is perfectly flat
- ensure that the front of the template is parallel with the front of the countertop edge.
- Check the underside of the countertop to ensure that the location chosen for the installation is free from obstructions such as drawers, shelves, partitions, or other structural members. Also ensure that sufficient space for the mounting clamps is provided. Remove or re-locate any obstructions.

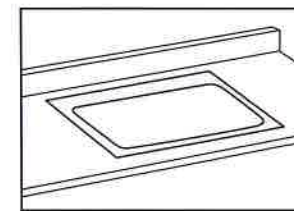


BOSCO

INSTALLATION INSTRUCTIONS -SINKS WITH TEMPLATES


3. Mark the opening and faucet holes on it make sure that the sink front is parallel to the front of the counter. installing a top mount sink with faucet hole trace the holes on the countertop. Be sure the sink is properly centered both front to back and side to side

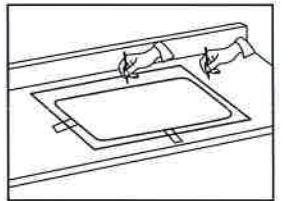


4. Drill a hole to start cut out then use a jigsaw to cut carefully along the inside edge of the cut out line and a hole saw to cut out the necessary faucet holes

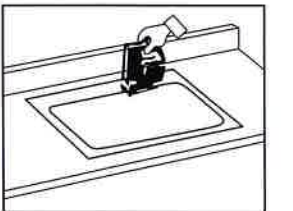

5. Install the sink strainer in the sink, referring to the illustration printed on the front cover. Tighten the sink strainer to make a water tight seal, Do not install the faucet assembly at this time

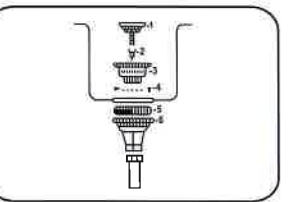


6. Install mounting clips on the sink. Place the sink clamps in the mounting brackets around the sink or slide them into the rail channel. Turn mounting clips against the underside of the counter top and tighten with.

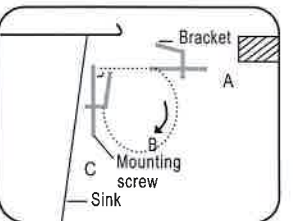

7. place the sink into the sink opening with the strainer to the rear.

8. Remove any excess sealing compound, being careful not to damage the finish of the sink or the countertop. Install the faucet following the manufacturer's instructions.

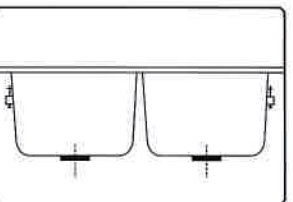

Toll Free Consumer Assistance
1888 366 1066

Monday-Friday, 10 a.m. to 8 p.m., EST
Saturday-Sunday, 10 a.m. to 3 p.m., EST

BOSCO

GUIDE D'INSTALLATION ET DE SOINS POUR ÉVIERS EN ACIER INOXYDABLE



Nous vous remercions de votre achat d'un évier BOSCO. Suite à l'installation appropriée, nous sommes convaincu que vous profiterez de cet évier pendant plusieurs années. Veuillez prendre un moment pour lire les directives d'installation et de soins avant l'installation.

● **ATTENTION : CET ÉVIER PEUT AVOIR DES BORDS COUPANTS. SOYEZ PRUDENT LORS DE LA MANUTENTION. NOUS VOUS RECOMMANDONS DE PORTER DES GANTS POUR PRÉVENIR LES BLESSURES**

● **AVERTISSEMENT POUR L'INSTALLATEUR; VEUILLEZ LAISSER CE PAMPHLET AU PROPRIÉTAIRE**

SOINS ET ENTRETIEN

À FAIRE

Pour éviter l'accumulation de graisse et de résidus, nettoyez l'évier régulièrement avec un détergent non-abrasif. Puisque le détergent à vaisselle n'est pas nécessairement effectif pour nettoyer la graisse, l'utilisation d'un produit de nettoyage domestique non-abrasif vous donnera de meilleurs résultats. Les produits de nettoyage avec un agent abrasif doux qui sont recommandés pour le nettoyage d'éviers en acier inoxydable par le fabricant sont normalement acceptables si l'utilisateur suit les directives indiquées sur l'emballage du produit de nettoyage.

À ÉVITER

N'utilisez pas un tampon à récurer en laine d'acier ou des outils en métal comme les grattoirs ou les brosses métalliques. Ne laissez pas de plaquette en caoutchouc dans l'évier. Les points de contact ont tendance à accumuler des résidus sur l'évier qui pourraient tacher l'évier et être antihygiéniques. N'utilisez pas de détergent avec du chlore, de l'argent ou de l'acide chlorhydrique sulfuré. Nous suggérons à l'utilisateur d'utiliser un détergent neutre avec un linge ou une éponge et de frotter dans le sens de l'acier et de rincer avec de l'eau.

BOSCO

DIRECTIVES D'INSTALLATION - EVIERS AVEC GABARITS

• Pour le but de clarification, seul un évier à deux cuves est illustré pour démontrer les détails d'installation qui sont communs à un évier à une cuve

REMARQUE : Le gabarit pour l'ouverture de l'évier dans le comptoir est inclut dans la boîte

• Le bord extérieur du gabarit indique le périmètre de l'évier ce qui est donc l'espace actuel occupé par l'évier sur le comptoir une fois l'installation terminée

• Le bord intérieur du gabarit indique l'espace actuel du comptoir qui doit être découpé pour installer l'évier.


• **Selon le modèle de votre évier, votre gabarit peut différer du gabarit utilisé dans l'illustration.**

• **Assurez-vous que le gabarit soit bien placé sur le comptoir.**

• **L'évier peut avoir des bords coupants. Soyez prudent lors de la manutention.**

Vous aurez besoin des outils suivants

Crayon pinces de fixation perceuse
Scie sauteuse vis de fixation

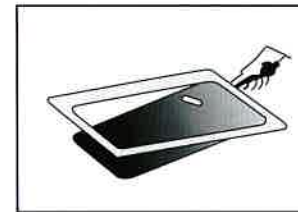


1. retirez la section du centre du gabarit en coupant le long du bord intérieur du gabarit

2. Placez le gabarit sur le comptoir à l'endroit exact de l'installation désiré de l'évier, tout en tenant compte de l'emplacement du robinet

• Assurez que l'emplacement choisi sur le comptoir soit complètement plat

• Assurez que le devant du gabarit soit parallèle à l'avant du bord du comptoir.


• Vérifiez le dessous du comptoir pour assurer que l'emplacement choisi n'a rien qui nuira à l'installation comme des tiroirs, étagères, cloisons, ou autres structures. Assurez également qu'il y a suffisamment d'espace pour les pinces de fixation. Retirez ou déplacez tout ce qui pourrait gêner à l'installation.

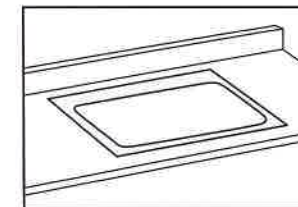


BOSCO

DIRECTIVES D'INSTALLATION - EVIERS AVEC GABARITS (SUITE)


3. Tracez l'ouverture de l'évier ainsi que les ouvertures pour le robinet pour assurer que l'avant de l'évier est parallèle à l'avant du comptoir. Assurez que l'évier est bien centré de l'avant à l'arrière et de bord à bord.

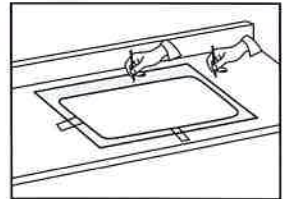


4. Percez un trou pour commencer à couper, utilisez ensuite la scie sauteuse pour couper la ligne du bord intérieur avec soin et une scie cylindrique pour couper les trous nécessaires pour le robinet

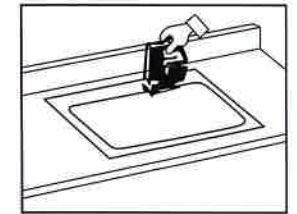

5. Installez le filtre d'évier; voir l'illustration imprimée sur la page couverture. Serrez le filtre d'évier pour former un scellage étanche à l'eau. N'installez pas l'assemblage du robinet pour le moment.

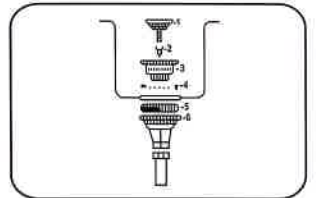


6. Installez les pinces de fixation sur l'évier. Placez les pinces de l'évier dans les supports de montage autour de l'évier ou glissez-les dans le profilé de longeron. Tournez les pinces de fixation contre le dessous du comptoir et serrez.

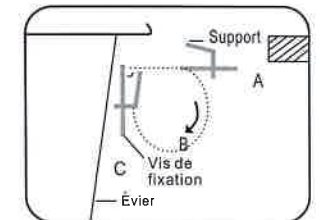

7. Placez l'évier dans l'ouverture pour l'évier avec le filtre d'évier vers l'arrière.

8. Enlevez l'excès de mastic de jointoiement, tout en prenant soin de ne pas dommager le fini de l'évier ou le comptoir. Installez le robinet selon les directives du fabricant.

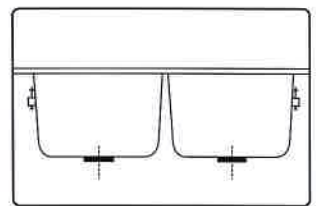

Assistance à la clientèle sans frais

1-888-366-1066

Du lundi au vendredi, 10h00 à 20h00, HNE

Du samedi au dimanche, 10h00 à 15h00, HNE