Boardwalk[™] Technical Specification

Mirror with Decorative Hardware

Y3292


Stock Numbers:

- Y3292CH Mirror with Decorative Hardware Chrome Finish
- Y3292BN Mirror with Decorative Hardware
 Brushed Nickel Finish
- Y3292BRB Mirror with Decorative Hardware Mediterranean Bronze

Materials:

Mirror with Decorative Hardware is constructed of zinc.

Dimensions:

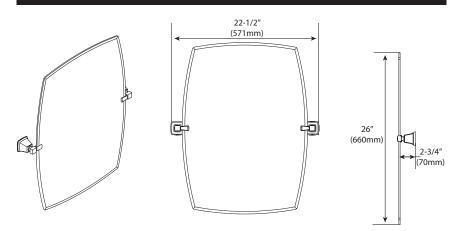

Installation Instructions:

Directions below are for installation into drywall. If installing product into a stud, use the wood screws and washers provided only.

- 1. Remove the mounting bracket from the body by loosening the set screw.
- 2. Position the mounting template on the wall in the desired location. Using a level, align the template and tape it to the wall.
- 3. Drill 1/2" pilot holes in marked location, remove template from wall.
- 4. Place mounting bracket over holes, align and trace both parts.
- 5. Attach mounting bracket to wall using anchors in predrilled pilot holes.
- 6. Unscrew plastic nut from end post.
- 7. With the back of the mirror facing you, slide both end posts into position on the mirror. Align the screw with the hole in the mirror.
- 8. Thread on plastic nut and hand tighten.
- 9. Place each post over the mounting bracket with setscrew down. Tighten both

Cleaning Instructions:

To preserve the fine finish of this product, clean only with a soft damp cloth. Dry well. Do not use commercial or abrasive cleaners.

Stock Number: Y3292 Mirror with Decorative Hardware

25300 AL MOEN DRIVE • NORTH OLMSTED, OH 44070 CONSUMER SUPPORT: (800) 289-6636 • FAX: (800) 848-6636 INTERNATIONAL: (440) 962-2000 • FAX: (440) 962-2726 CUSTOMER SERVICE (USA): 800-882-0116 • FAX: (888) 379-2720 WWW.MOEN.COM © 2019 Moen Incorporated. Moen is a registered trademark and Boardwalk is a trademark of Moen Incorporated. All rights reserved.

MOEN®